

## Contents

- 1 Hardware Information
  - ◆ 1.1 Audio Card
  - ◆ 1.2 References

## Hardware Information

- Not known

## Audio Card

Based on the experience of Richard de Bruin[1], the following steps are needed to make the sound card work correctly.

Open the following file with nano:

```
$ sudo nano /etc/modprobe.d/snd-hda-intel
```

Type the following line into it:

```
options snd-hda-intel model=laptop-eapd probe_mask=1
```

Type CTRL+X and CTRL+Y("http://en.pardus-wiki.orgYes"http://en.pardus-wiki.org, it may change according to your system locale) and reboot your system.

The steps above applies to **Pardus 2008.x**.

## References

[1]: [http://bugs.pardus.org.tr/show\\_bug.cgi?id=8350](http://bugs.pardus.org.tr/show_bug.cgi?id=8350)